


To gain access to the chart drive components, press down on the door release latch and carefully swing the door downward.

Reroll Method

1. Flip chassis latch outward.
2. Flip roller retaining locking clips upwards to release rollers.
3. Remove supply roller from instrument and insert it into the core of a new roll of chart paper. If replacing an empty roll, remove and retain the cardboard sleeve.
4. Place empty cardboard sleeve onto the reroll roller.
5. Tape free end of chart paper to the cardboard sleeve. Perforations in the chart paper must be at the geared end of the roller. Roll the chart a few turns onto the roller, keeping the paper straight and taut.
6. Hold the reroll in your left hand and the supply roller in your right so that the blank side of the chart paper is facing upward between the rollers. Slide the chart paper under the right side plate and maneuver the chart perforations over the sprockets on the drive roller.
7. Press the supply roll tension arm toward the left side plate, then seat the supply roller in its notches. Then seat the reroll roller in its notches. Snap the roller retaining locking clips to lock the rollers in place.
8. Take up slack by advancing the reroll roller.
9. Press down on the right hand side plate and flip up the chassis latch (press latch until it snaps into place). Close the door. Reconnect signal and power connections. Use the thumbwheel on the outside of the door to advance the chart as desired.

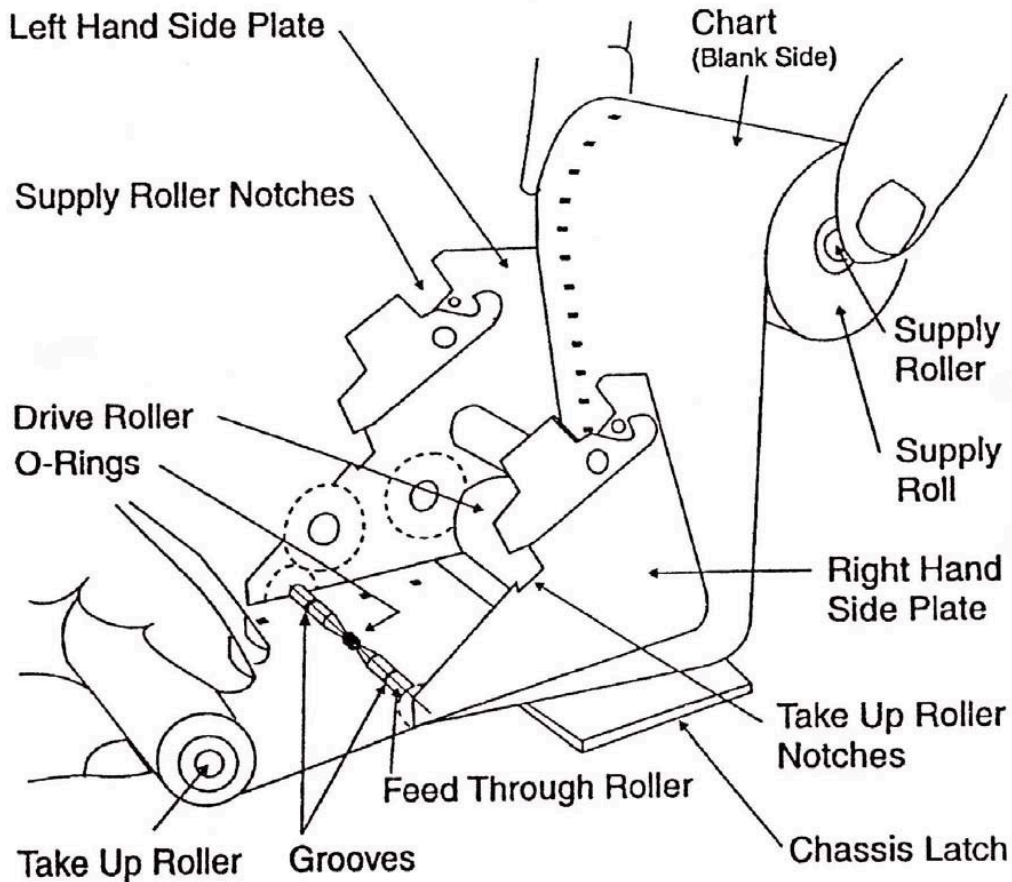

Reroll Method Chart Paper Installation